

VERCO


Look

**Operating
Instructions**




 **my chair**

back rake action

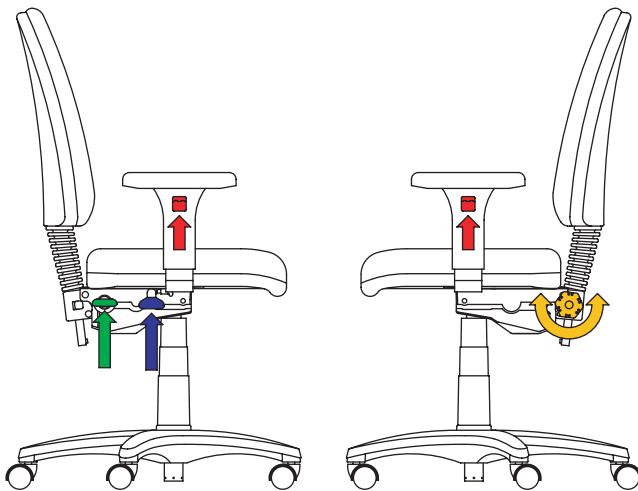

forward tilt action

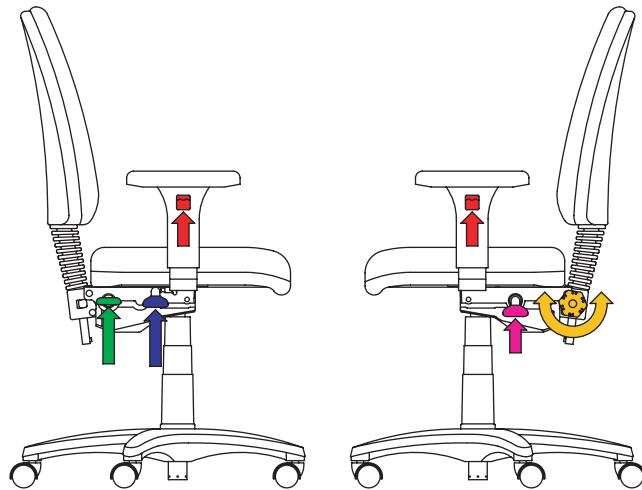

arm height

lift button on side of arm rest and raise or lower arm rest to the desired height. release button to lock.

back height

turn knob anti-clockwise to release back and raise or lower back to desired height. turn knob clockwise to lock.

back angle

lift lever to release action, lean backwards or forwards to achieve desired position, push lever down to lock.

seat height

lift lever and use body weight to raise or lower the seat to desired position, release lever to lock.

forward tilt

lift lever to activate the seat tilt. use body weight to adjust, push lever down to lock seat in desired position.

Look Back Rake Action



Look Forward Tilt Action



care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit www.verco.co.uk for further information.



VERCO
OFFICE FURNITURE LIMITED

www.verco.co.uk