



VERCO

pop

operating
instructions

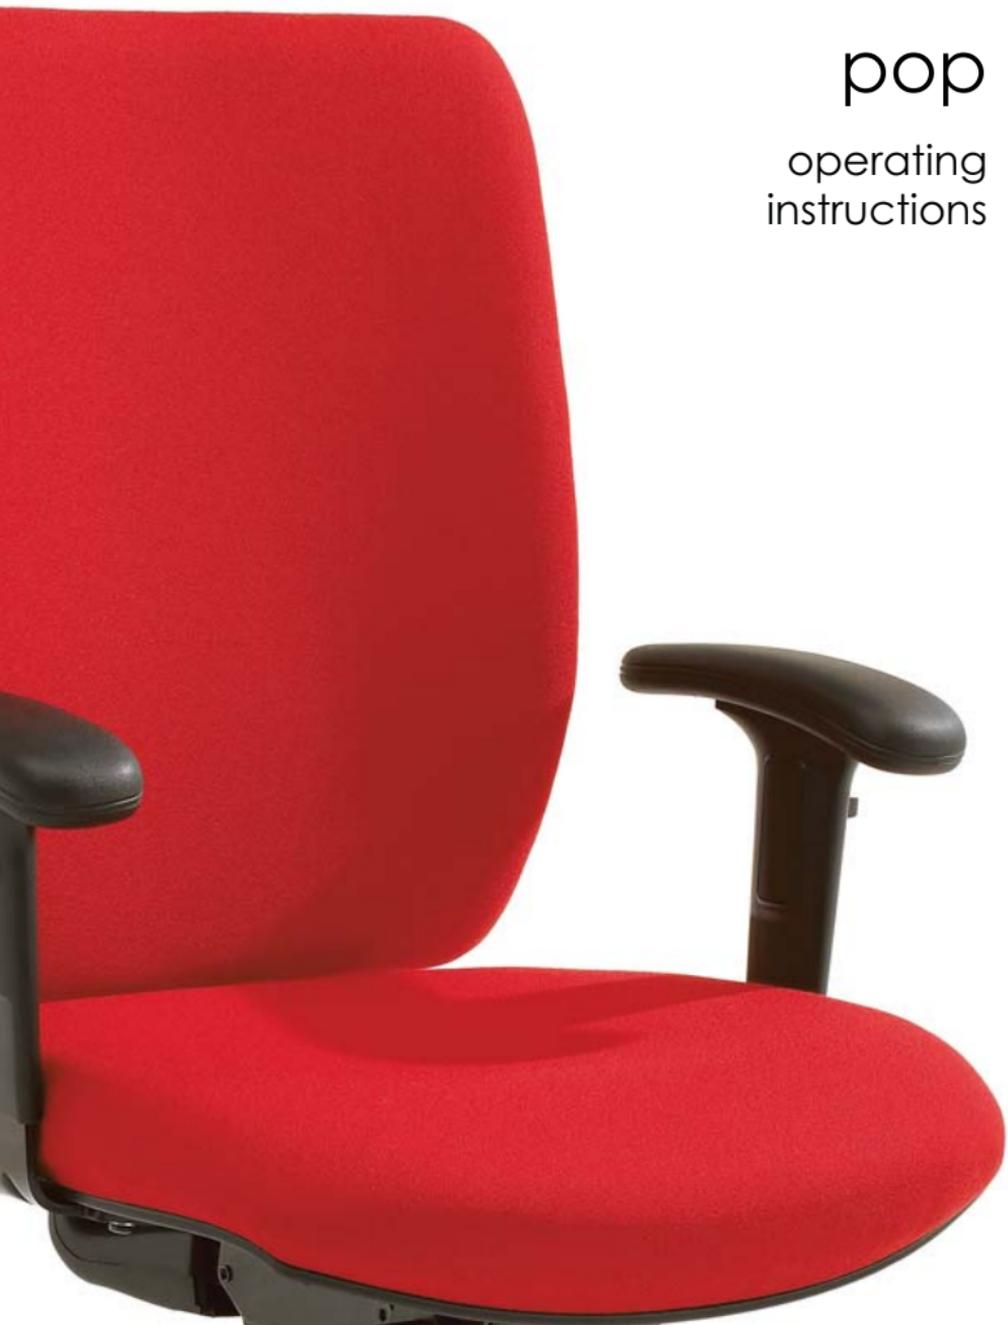

back rake action

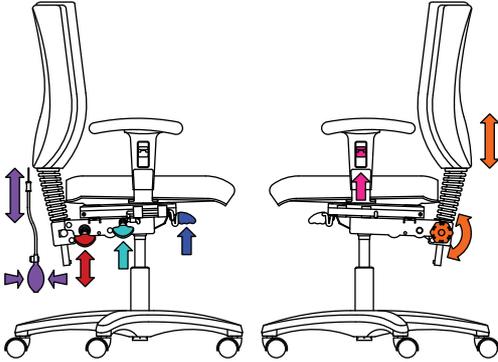


back angle

Lift lever to release action, lean backwards or forwards to achieve desired position, push lever down to lock.

back height

Turn wheel anti-clockwise to release. Raise or lower back to desired height. Turn clockwise to lock.

isb action

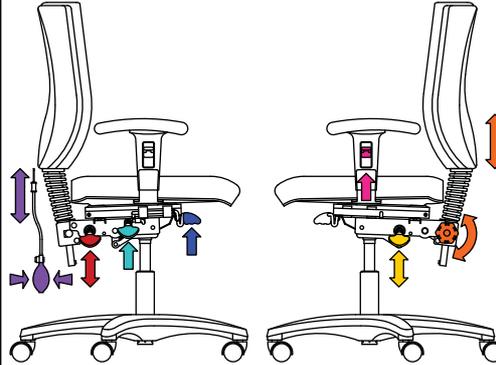

back angle

Lift lever to release action, lean backwards or forwards to achieve desired position, push lever down to lock.


back height

Turn wheel anti-clockwise to release. Raise or lower back to desired height. Turn clockwise to lock.

seat angle

Lift lever to activate seat tilt. Use body weight to adjust, release lever to lock seat in desired position.

synchronised action

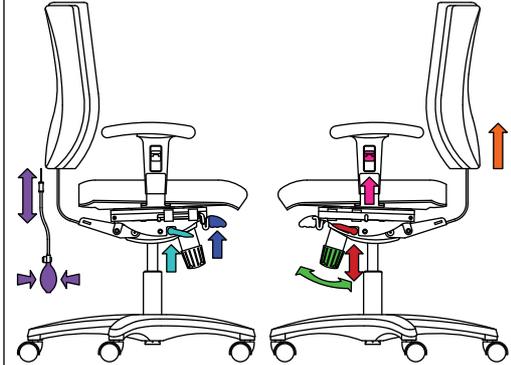

synchro action

Lift lever to release action, lean backwards or forwards to achieve desired position, push lever down to lock. For 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

The action has a safety feature. When the action is first unlocked, lean against back to start the action.

back height

Place hand below back, gradually lift to allow height. Lift to top to desired height. Lift to top to allow to drop to start position.

tension control

To increase tension, turn wheel clockwise. Turn wheel anti-clockwise to decrease tension.

seat height

Lift lever and use body weight to raise or lower seat to desired position, release lever to lock.

seat depth

Lift lever to release seat, use body weight to slide seat to desired position, release lever to lock.

lumbar support

Carefully insert adaptor into valve and pump balloon to suit. Carefully remove and safely store for future use.

arm height

Lift button on outside of arm and raise or lower arm to desired height, release button to lock.

Please note: Depending on the specification of your chair, it may not have all of the featured options above. Please see overleaf for the action on your chair.

- back rake (br)**
- independent seat and back (isb)**
- synchronised seat and back (syn)**

care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit www.verco.co.uk for further information.



VERCO
OFFICE FURNITURE LIMITED

www.verco.co.uk