


verco.

Max

Operating Instructions



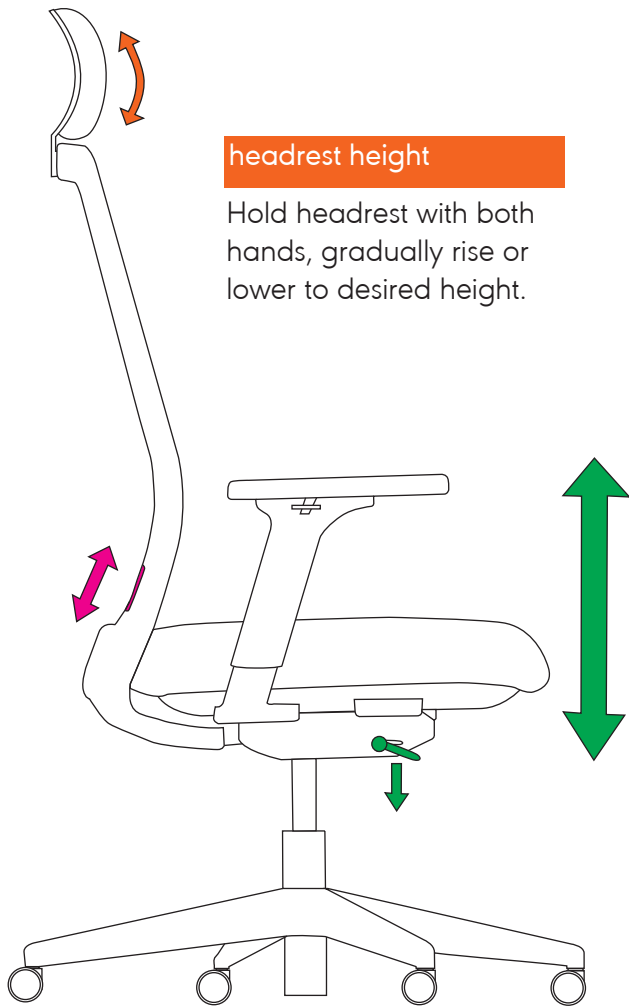

headrest height


Hold headrest with both hands, gradually rise or lower to desired height.

adjustable lumbar support

Place hands above and below the lumbar support, gradually raise or lower to desired height.

seat height adjustment

Push down lever and use body weight to raise or lower the seat to the desired position, release lever to lock.

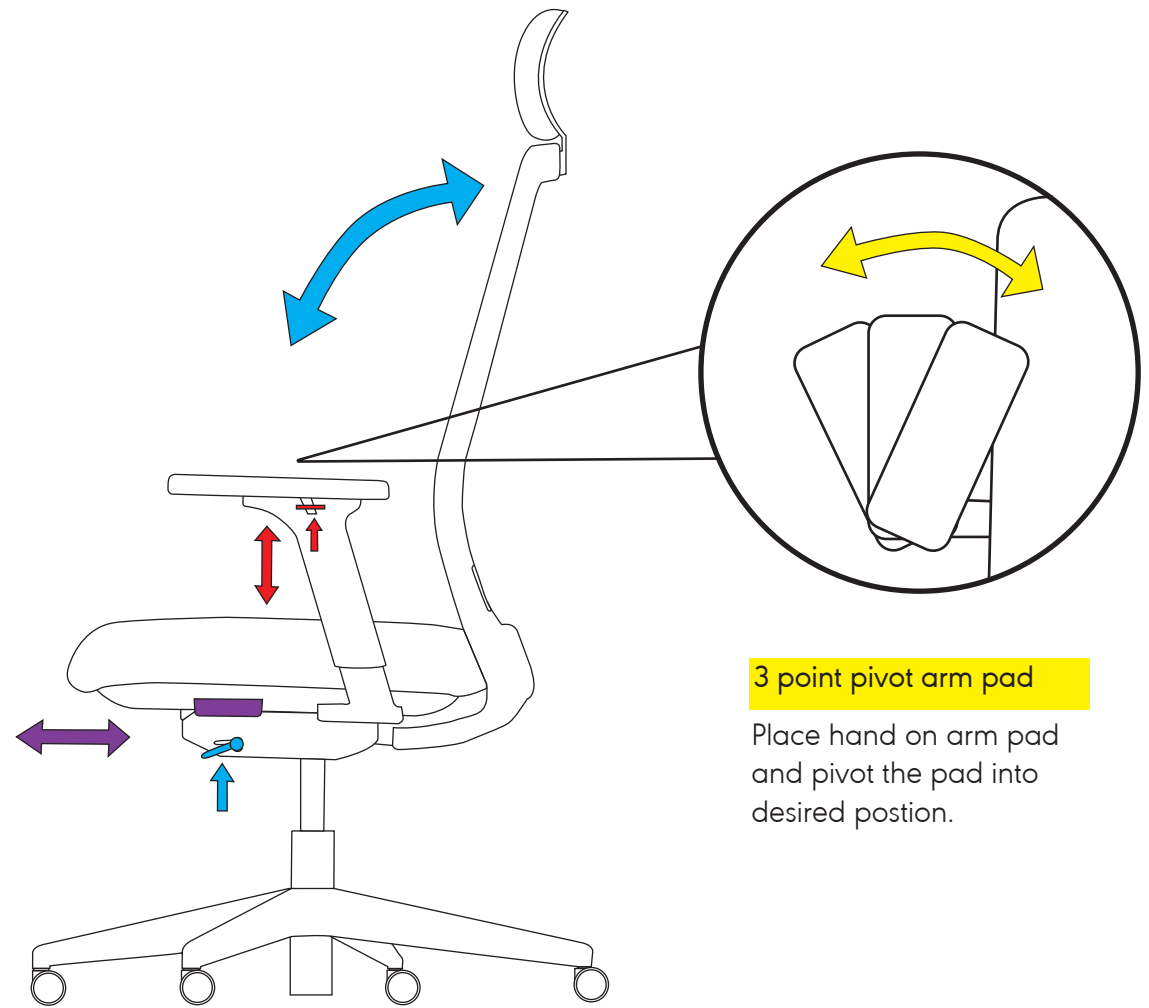

3 point pivot arm pad

Place hand on arm pad and pivot the pad into desired position.

seat depth adjustment

Pull lever out to release seat, use body weight to slide seat to desired position, release lever to lock.

synchronised seat and back movement

Lift lever to release action, lean backwards or forwards to achieve desired position, push lever down to lock. For 'dynamic posture' the chair may be left unlocked in it's 'free float' mode.

adjustable height arms

Lift lever on outside of arm and raise or lower arm to the desired height, release lever to lock.

care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit www.verco.co.uk for further information.