


Jensen-up Assembly Instructions

Unwrap and lay the 4 sections on a clean floor surface or protected by the wrapping



Fixings; 6 x studs 12 x set-screws

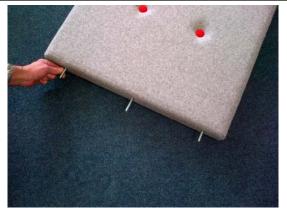

Screw in 3 studs to both sides of the upper back section – approx half in for the outer studs and one third in for the centre stud.



Stand the upper back onto the left side panel, locating the push-fit studs.



Stand the seat base onto the side and unzip the liner to access fitting.



Fix to the side using the 6 x set-screws each side, locating the corner fixing first, followed by the others in-turn.



... assembly Instructions (continued)

Drive home all set-screws, gradually, to ensure an even pull-up.

Lift and place the right side panel, locating carefully onto the upper back studs. This is a push/grip fit. ... push firmly home, taking care not to trap fingers.

