

### Step 1

Unzip the bottom cloth and line up the holes in the seats with the inserts in the Slab Arm.

#### Fixings supplied:




M6 x 60mm Bolt, Washer,

12No. Fixings supplied to secure Seats to Slab Arm.



### Step 2

With all the bolts located into the inserts, tighten, securing the Seat Units in place.

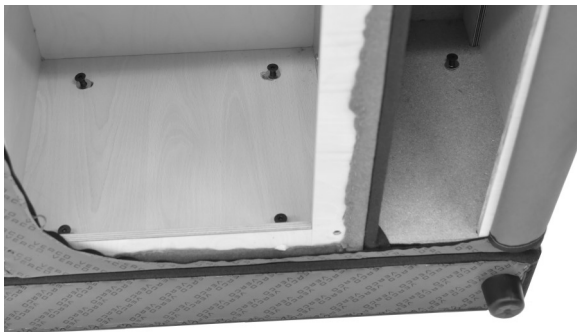

### Step 3 Fitting the Table

When the Seat Units are secured to the Slab Arm the table can be fitted with two brackets which are located with inserts in the Slab Arm. Secure the brackets with the M6 x 25mm Socket head bolts.



### Step 4

With the brackets in position offer up the table, locating the pilot holes under the table with the brackets.



### 5. Fitting the Screen

The Screen locates through the slot in the table and is screwed to the fixing bracket, using 2No. M6 x 20mm Flat head socket bolts and nuts.



### BOX IT STUDY INSTALLATION INSTRUCTIONS

# verco.

Chapel Lane, High Wycombe, Buckinghamshire HP12 4BG

t: +44 (0) 1494 448000 w: verco.co.uk

DOC ID: AI\_0009